

Panasonic North America Series 20/12 + Enseo HD2000/3000

Configure TV: Go into HOTEL MODE (<MENU>, <G>, <Y>, <0>), set MODE=ON, TA Control=EXTERNAL, BUTTON LOCK is OFF.

LG North America + Enseo HD2000/3000

Configure TV: Plug in DATA jack to TV's DATA port. TV will automatically power off and enter Enseo Mode after 3 minutes of inactivity.

Philips North America, Sharp North America + Enseo HD2000/3000

No TV configuration needed.

Any Samsung North America Model + Enseo HD2000/3000

Connect STB RJ11 to TV's DATA port using Samsung's BN3900865B RJ11 cable.

Configure TV: Turn power ON. With Samsung remote control, enter the menu by pressing <INFO>, <MENU>, <0>, <1>, <EXIT>. Ensure the following is selected:

Hotel Mode is ON (or Interactive)

Music Mode (AV) is ON

Music Mode (PC) is ON

RJP Priority AV, PC and HDMI is 1, 2, and 3, respectively

RJP AV Option is AV1

RJP HDMI Option is HDMI2

Set SI Vendor to ENSEO