

Samsung North America

What You Will Need:

- TA-7650 or TA-7650/TA-7500L
 - MediaHub HD Connectivity Panel
 - Power Supply Cable (*Note: MediaHub with Power/Data Extender model includes TWO power supplies – one for media panel and one for power panel*)
 - Ethernet Cable (for MediaHub with Power/Data Extender model only)
- MediaHub Cable Kit
 - HDMI Cable (3m)
 - RS-232 Cable
 - DB9-3.5mm Adapter
- Samsung Hospitality Display & Remote Control

Samsung Direct-to-TV Installation Instructions

Follow cable connection instructions illustrated in Figure 1. Then configure the TV and MediaHub HD according to the model-specific requirements on the following page.

For Samsung 2011 North America Models

For Samsung LED and LCD Hospitality Series displays with EXLINK serial port (factory-level firmware)

MediaHub HD DIP Mode B7: UP-DWN-UP-UP -- DWN-UP-UP-UP

MediaHub HD Firmware Version: 1.23+

MediaHub HD Video Driver Firmware: 3.26+

Configure TV: Using Samsung remote control, enter the menu by pressing <MUTE>, <1>, <1>, <9>, <ENTER>. Ensure the following is selected:

Hotel Mode = ON, RJP HDMI Option = HDMI2 and set appropriate SI Vendor.

**If using SI Vendor = ENSEO, please refer to Enseo Installation Instructions section.*

For Samsung 2009/2010 North America Models

For Samsung Series 4 LNnnB450C4H and LNnnB457C6H models with EXLINK serial port (TV firmware v.1011.1+)

For Samsung Series 5 LNnnB550K1H models with EXLINK serial port (TV firmware v. 1007+)

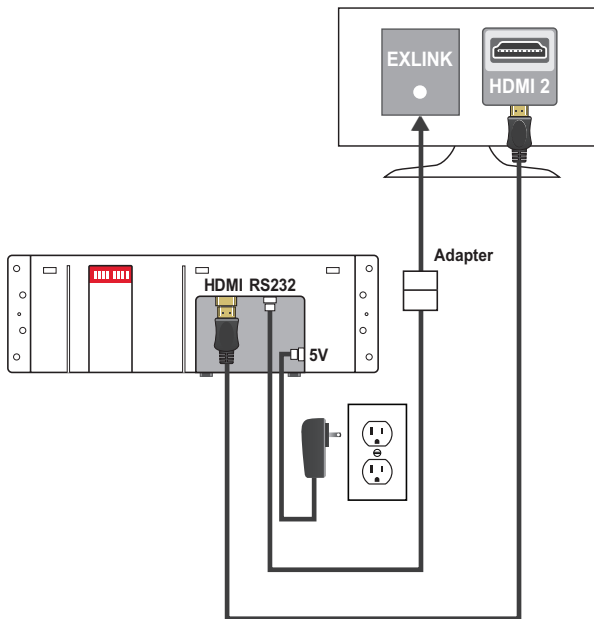


Figure 1: Samsung direct-to-TV cable connection diagram.

Samsung 2009/2010 continued:

For Samsung LED Series 4, LED Series 6, LCD Series 3, LED Series 4, LED Series 5 models with EXLINK serial port (factory-level firmware)

MediaHub HD DIP Mode B7: UP-DWN-UP-UP -- DWN-UP-UP-UP

MediaHub HD Firmware Version: 1.23+

MediaHub HD Video Driver Firmware: 3.26+

Configure TV: Using Samsung remote control, enter the menu by pressing <MUTE>, <1>, <1>, <9>, <ENTER>. Ensure the following is selected:

Hotel Mode = ON and RJP HDMI Option = HDMI2.

For Samsung 2008 North America Models and Older (non-LodgeNet)

For Samsung Series 4 LNnnA450C1H and Series 6 LNnnA650A1H models with EXLINK serial port (TV firmware v.1003.8+)

MediaHub HD DIP Mode 57: DWN-UP-DWN-UP -- DWN-UP-UP-UP

MediaHub HD Firmware Version: 1.23+

MediaHub HD Video Driver Firmware: 3.26+

Configure TV: Using Samsung remote control, enter the menu by pressing <MUTE>, <1>, <1>, <9>, <ENTER>. Ensure the following is selected:

Hotel Mode = ON and RJP HDMI Option = HDMI2.

For Samsung North America Models and an External Enseo STB

Follow instructions for Samsung Direct-to-TV Installation according to the year/model number of your Samsung display. OR, you may install MediaHub HD's serial control connection to the Enseo STB. See instructions for Enseo STB Installation.

For Samsung North America Models and an External PPV STB

Follow Samsung Direct-to-TV installation instructions according to the year/model number of your Samsung display. Connect the PPV STB AV Out to TV's HDMI1 port.

For Legacy Samsung + LodgeNet environments, please refer to the LodgeNet STB section. Or, follow **Standard Installation** instructions on Page 9 and configure the guest access technique (channel map, program INPUT button on remote control, or program LodgeNet on-screen prompt.)